

FKP Quick options reference

TIMER SETTINGS:				
Nr:	Parameter:	Value:	Default:	Description:
50	Chosen program	P1 - P7	P1	Choose a program to change
51	Run Px on	No days, Mon. - Sun., Weekdays, Weekends, All days	No days	Choose which days the program should run on.
52	Start time for Px	00:00 - 23:59	00:00	Choose which time on the chosen day the program starts.
53	Stop time for Px	00:00 - 23:59	00:00	Choose which time the program stops. If the chosen time is before the start time, the program will run until the next day.
54	Ref value for Px	0 - 100%	100%	Percentage of pressure or frequency reference used when the program is active.
62	Force revalue	yes, no	no	Force revalue so it is always constant and independent of the temperature.

CLOCK SETTINGS: (under System Settings)

55	System clock	Monday-Sunday	-	Sets the current day
56	System clock	hh:mm:ss	-	Sets the current time of day

MODBUS SETTINGS: (under System Settings)

Nr:	Parameter:	Value:	Default:	Description:
57	MODBUS address	1 - 247	1	Choose the MODBUS address of this drive.
58	MODBUS parity	None, Odd, Even	Even	Choose MODBUS parity.
59	MODBUS baudrate	2400, 4800, 9600, 19200	19200	Choose MODBUS communication bitrate.

Rev 1.3

FKP Quick options reference

TIMER SETTINGS:				
Nr:	Parameter:	Value:	Default:	Description:
50	Chosen program	P1 - P7	P1	Choose a program to change
51	Run Px on	No days, Mon. - Sun., Weekdays, Weekends, All days	No days	Choose which days the program should run on.
52	Start time for Px	00:00 - 23:59	00:00	Choose which time on the chosen day the program starts.
53	Stop time for Px	00:00 - 23:59	00:00	Choose which time the program stops. If the chosen time is before the start time, the program will run until the next day.
54	Ref value for Px	0 - 100%	100%	Percentage of pressure or frequency reference used when the program is active.
62	Force revalue	yes, no	no	Force revalue so it is always constant and independent of the temperature.

CLOCK SETTINGS: (under System Settings)

55	System clock	Monday-Sunday	-	Sets the current day
56	System clock	hh:mm:ss	-	Sets the current time of day

MODBUS SETTINGS: (under System Settings)

Nr:	Parameter:	Value:	Default:	Description:
57	MODBUS address	1 - 247	1	Choose the MODBUS address of this drive.
58	MODBUS parity	None, Odd, Even	Even	Choose MODBUS parity.
59	MODBUS baudrate	2400, 4800, 9600, 19200	19200	Choose MODBUS communication bitrate.

Rev 1.3